




Installation environment



Max.+50°C




Min.-10°C




RH.+5%~+95%

Installation tools

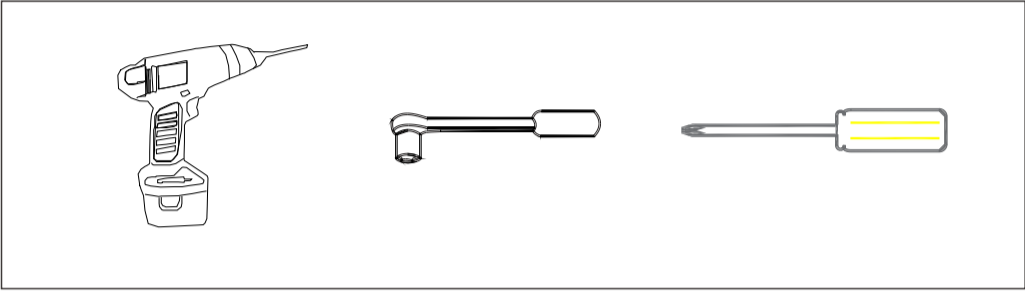


1.Check


1-1 Check Packing List

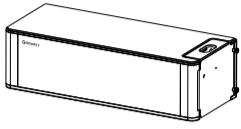


ARK-2.5L-A1

 


Wall Hangers X1

 

 
Parallel communication line X1
Ground wire X1



 Quick installation Manual X1
Operation Manual X1
Warranty Card X1
Certification X1




Positive parallel power line X1
Negative parallel power line X1




M6 explosive screw X2
M6 flange nut X1
M4x10 Combination screw X2

 1-2 Check accessories




ARK-2.5L-A1

 A




ARK-2.5L-A1 Cable To PCS

 B



ARK-2.5L-A1 Parallel Cable

 C





ARK-2.5L-A1 Base

D

Installation Method	Compound Mode
Standard Wall-Mounted Installation	A+B
Standard floor installation	A+B+D
Wall-Mounted Battery system stacked in two line	A+B+C
Floor installation battery system stacked in two line	A+B+C+D*2

System size

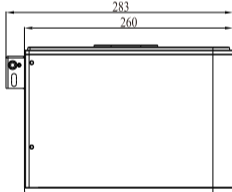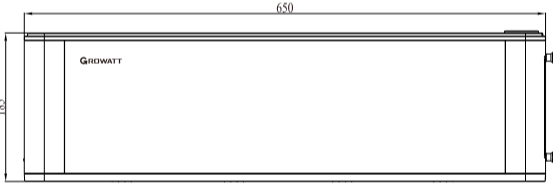


2.Floor installation with base

2-1 Installation Location Requirements

1. If more than 4 batteries are used, base mounting is recommended.

2. For floor installation with base, the maximum stack number of the battery is ten. But if the battery number is greater than six, we recommend stacking two stacks.

2-2 Installation Procedure

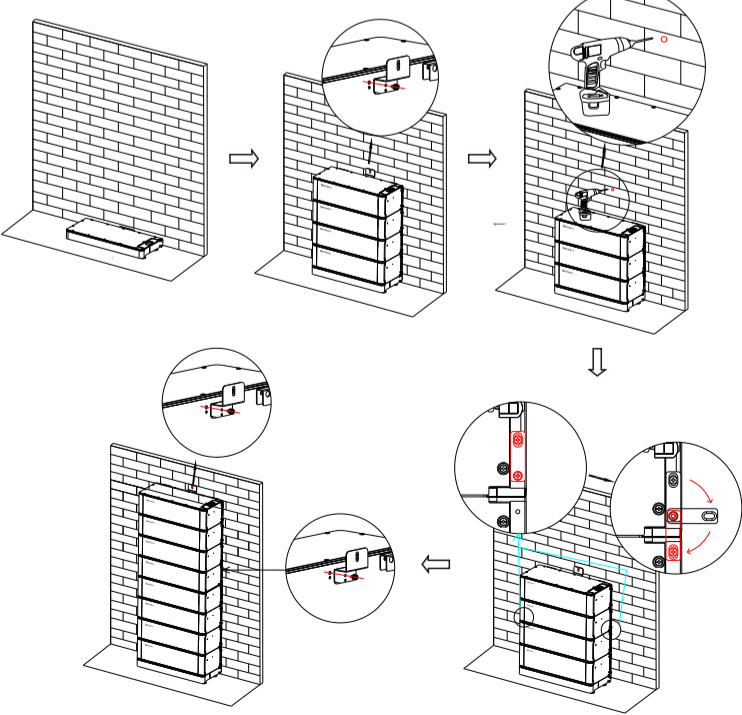



Note: The safety part needs to be installed at the top battery, however, once the number of the battery pack is higher than 7, one more safety part should be installed in the middle battery which is shown the last step. Avoid drilling holes in the water pipes and cables buried in the wall.

3. Wall-Mounted Installation Process

3-1 Installation Location Requirements


Note: The number of wall-mount installations should not exceed four.Please make sure that the weight capacity of wall should exceed 150kg.

3-2 Installation Procedure

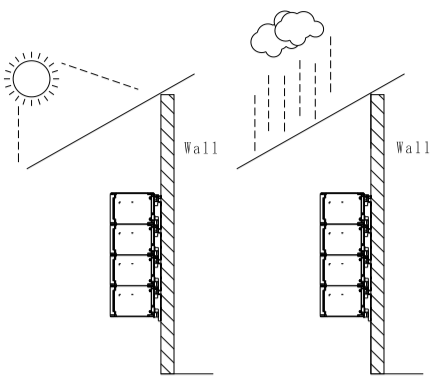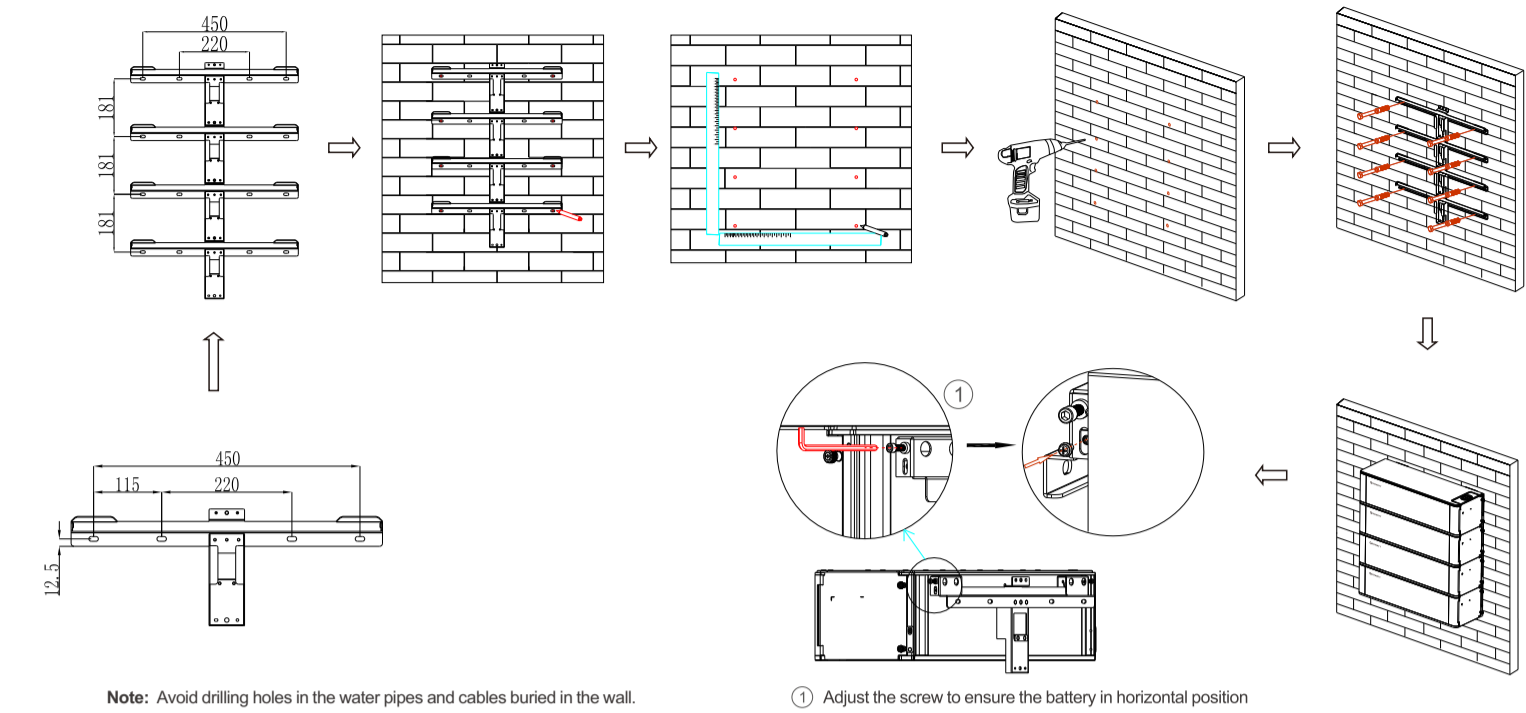


5. Wire Connection

5-1 Connection end face introduction

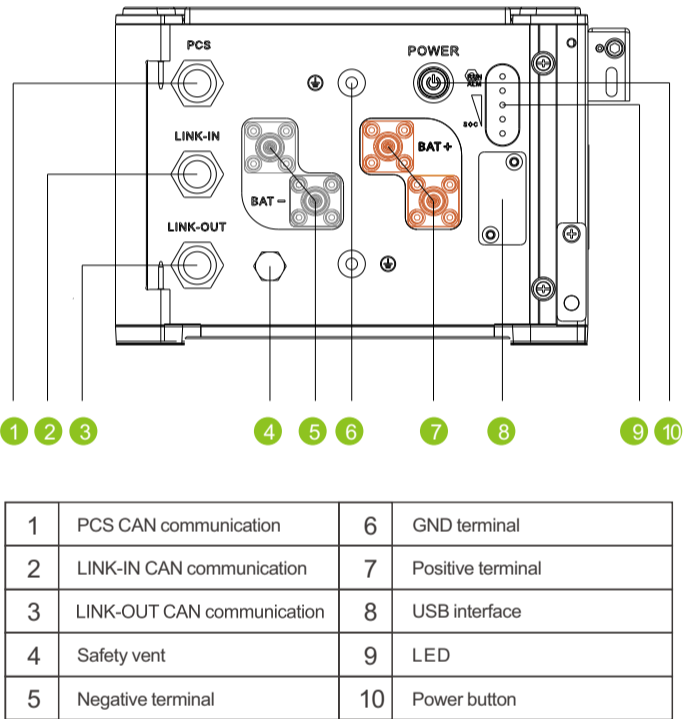


5-2 Diagram of wiring connection

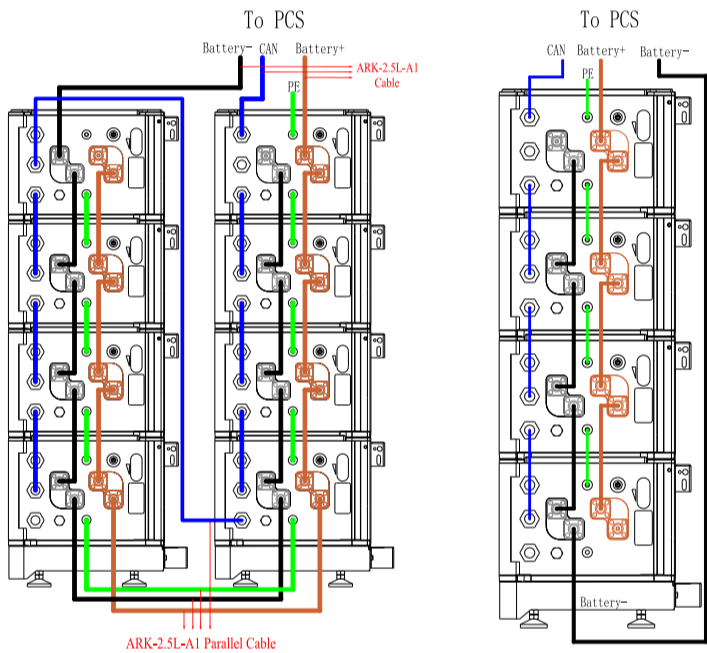

Note: The switch connect PCS to ARK-2.5L-A1, we recommend the use of molded case circuit breaker with rated working voltage greater than 80V and rated working current greater than 125A.


6.Terminal Connection

6-1 Power terminal

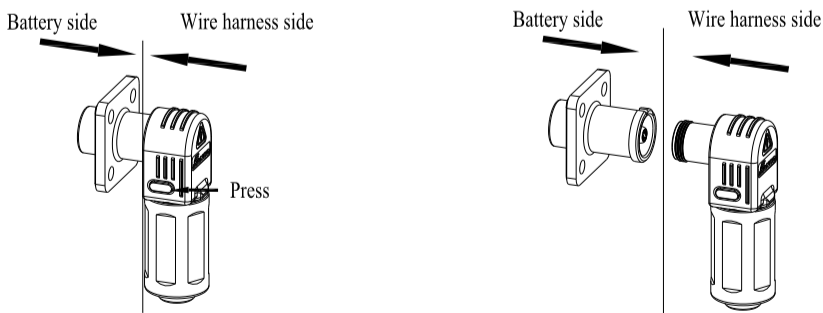

Press the position indicated in the figure above before disconnecting the power terminal.


6-2 Communication terminal

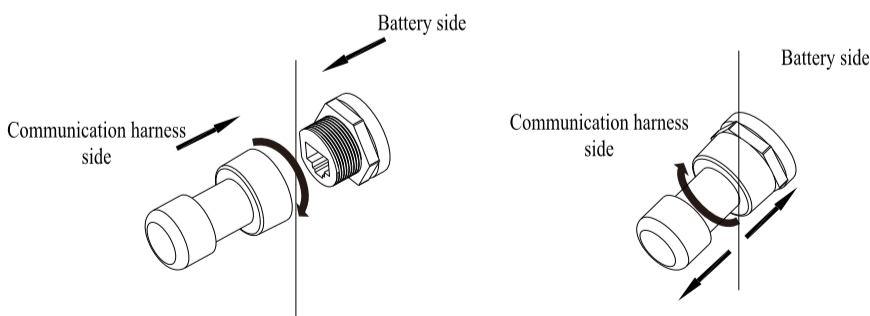

7.Key operation

Power Button

Situation	Touch	Definition
System off	Press(< 2S)	No reaction
	Press(≥2S)	Power on
System on	Press once	Shut down

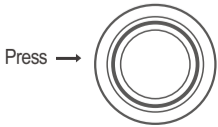

Note: When multiple battery modules are used in parallel connection, you only need to press one key of any module to start the system, and also press one key to shut down the battery system. ALM/RUN light turns green when powered on

8.Service and contact

Shenzhen Growatt New Energy Co.,Ltd.
4-13/F, Building A, Sino-German(Europe) Industrial Park,
Hangcheng Ave, Bao'an District, Shenzhen, China
☎ 86 755 2747 1942 ✉ service@ginverter.com
W:www.ginverter.com



Download Manual



Growatt New Energy

GR-UM-347-A-00